




The Diagnostic **BOX**.com

Advanced Technology for the Marine and Automotive Industry

TDB006

Transponder Antenna Tester

www.thediagnosticbox.com

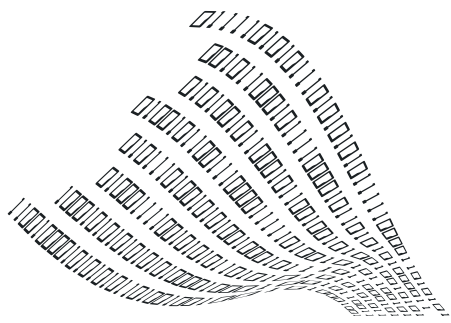

The Diagnostic **BOX**.com

Advanced Technology for the Marine and Automotive Industry



The TDB006 Transponder Antenna Tester has been designed to offer a fast and easy way of checking the transponder antenna across all vehicle systems and types.

The TDB006 can be used stand alone and can pick up the signal that is transmitted from the vehicle to the transponder key, and thus checking the functionality of the antenna and vehicle immobiliser signal output.

The Transponder Antenna Tester features signal indication by way of a visual LED and also a sounder which mimics the signal being sent.

Additional features include an auto power off and power indicator.

The Transponder Antenna Tester also features an external antenna wand, which has been designed to slide in to the vehicles fitted with card readers and slot keys such as Renault and BMW.

The wand can slide into the key slot along side the vehicle key and pick up the transponder signal being transmitted. Renault Card readers are particularly prone to failure and expensive dealer equipment is the only way to check the car reader is working, now the Transponder Antenna Tester can be used to quickly diagnose those elusive problems.



SPECIFICATIONS

OPERATING VOLTAGE	4.5 VOLTS DC
AUTO POWER OFF	2 MINUTES
BATTERIES	3 x AA Alkaline or NiMh rechargeable
OPERATING CURRENT	10mA
WEIGHT	155 Grams
SIZE	84 mm (W) x 140 mm (H) x 29 mm (D)
POWER CONSUMPTION	45mW
FREQUENCY RANGE	125kHz and 134kHz
OPERATING TEMPERATURE RANGE	0 to 50 DEGREES °C



www.thediagnosticbox.com