





The Diagnostic **BOX**.com
Advanced Technology for the Marine and Automotive Industry

TDB007

Peugeot and Citroen Pin Code Wizard

www.thediagnosticbox.com

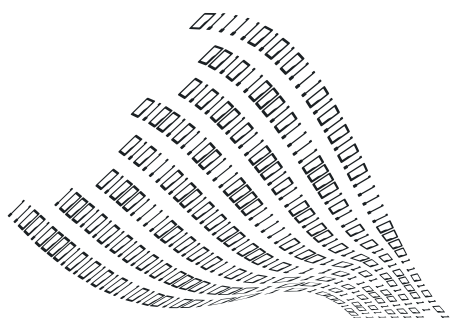

The Diagnostic **BOX**.com

Advanced Technology for the Marine and Automotive Industry



TDB007 Peugeot and Citroen Pin Code Wizard

The TDB007 Peugeot and Citroen Pin Code Wizard is a simple and easy device to extract the pin code from a range of vehicles.

The device has two modes of operation :-

Working Key Mode : The device can read the pin code from the vehicle immobiliser BSI memory when a working key is available, within 5 minutes.

Lost Key Mode : The device can read the pin code from the vehicle immobiliser BSI memory when there are no working keys, the time taken depends on the vehicle type and system, but typically takes between 15 and 90 minutes.

The TDB007 has a small backlit LCD display, small keypad to navigate the menu, a rear magnet to aid testing and secure the device when working under the bonnet/hood, an OBD Connector and cable and an additional cable/connectors for working with vehicles that do not have CAN BUS located within the OBD Diagnostic connector.

Applications :-

The device can work on all Peugeot and Citroen based models from 2001 to 2015 as listed in the applications guide on our web site. The applications are updated on a regular basis, so please always refer to the latest version to ensure you have the up to date information before you attempt to read the pin code. The device works on vehicles from 2005/2006 using the OBD port if CAN bus is available at the vehicle OBD connector, however for vehicles prior to this a direct connection can be made to the engine ECU connector CAN wires to enable communication with the BSI immobiliser ECU.

Models included :

Citroen	Peugeot	Fiat	Toyota
Berlingo	1007	Scudo	Proace
C2	206		
C3	207		
C3 Picasso	208		
C3 Pluriel	2008		
C4 Cactus	306		
C4 Picasso	307		
C5	308		
C8	3008		
DS3	406		
DS4	407		
DS5	4007		
Xsara Picasso	508		
Berlingo 2	5008		
Berlingo 3	607		
Jumper	806		
Jumpy	807		
	Bipper		
	Expert		
	Partner		

The device will only work on Peugeot and Citroen derived models, and cannot read the pin code on Fiat or Toyota derived models such as the 107, C1 as examples. The device is protected by international copyright laws and Patent Pending status for its unique design and software.

SPECIFICATIONS

Weight : 300 grams

Dimensions : 140mm x 90mm x 30mm

LCD Display : 2 line 8 Character Backlit Display

Rear Panel : Magnet for stability

OBD Cable Length : 1400 mm



www.thediagnosticbox.com